RadioShack®

Cat. No. 49-900

Simulated Auto Security

An easy-to-install flashing indicator simulates a real auto security system and deters thieves from tampering with your vehicle.

INSTALLING THE INDICATOR

Select a mounting location for the indicator that is visible from outside the vehicle, where the indicator's wire can reach the vehicle's fuse box. You can use the supplied mounting bracket, or mount the indicator directly in the vehicle's dashboard.

Cautions:

- Before drilling a hole in your vehicle's dash, be sure you can easily reach behind the mounting surface.
- Be careful to avoid drilling into anything on the other side of the dashboard.

Using the Mounting Bracket

1. Clean the mounting surface with denatured alcohol and let it dry completely.

© 1997 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

2. Peel the backing from one side of the double-sided tape and press it onto the bottom of the bracket. Then peel the backing from the other side of the tape and press the bracket onto the mounting location.

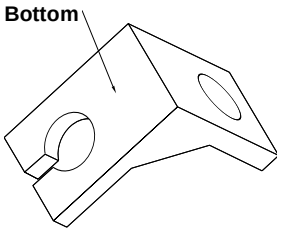

   Or, drill a 1/16-inch hole in the dashboard at the mounting location. Thread the supplied screw, then hang the bracket on it.

3. Press the supplied grommet into the front of the mounting bracket.



4. Press the indicator into the grommet from behind the mounting bracket.

Mounting the Indicator in the Dashboard

1. Drill a 1/4-inch mounting hole at the selected location.
2. Press the supplied grommet into the front of the hole.
3. Route the indicator's wires through the dashboard and press the indicator into the grommet.

MAKING THE CONNECTIONS

1. If you have a regular fuse, insert the supplied regular-blade fuse tap into the LED assembly's female connector.



   If you have a mini fuse, insert the supplied mini blade fuse tap into the LED assembly's female connector.



2. Attach the black ground wire with the spade lug connector to ground.
3. Remove the fuse from the fuse box.
4. Slip the bent end of the indicator's blade fuse tap over one leg of the regular fuse.

   For a mini fuse, slide one leg of the fuse into the hole in the tap.

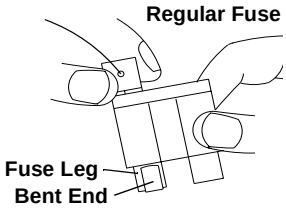

5. Replace the fuse with the blade fuse tap attached.

Peel the backing from the supplied "Warning" label and put it in a conspicuous location on the inside of the windshield.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600,
Fort Worth, TX 76102

We Service What We Sell *3/97*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

9A7 Printed in the U.S.A.